GB Fitting Instructions for Basic Carrier

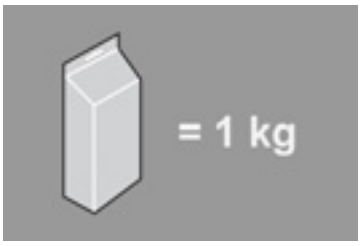

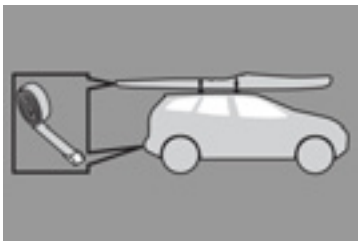

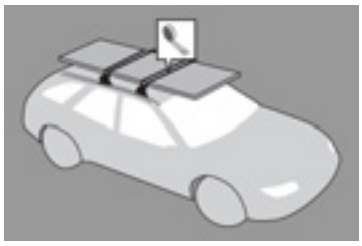

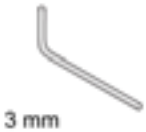

x 1

x 4

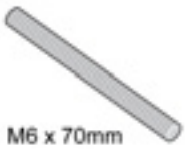

x 4

x 4

x 4

First Time Installation

- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.

- Use keys to remove covers.

- Use hex screwdriver to reverse adjusting screw 10 turns.

- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally.

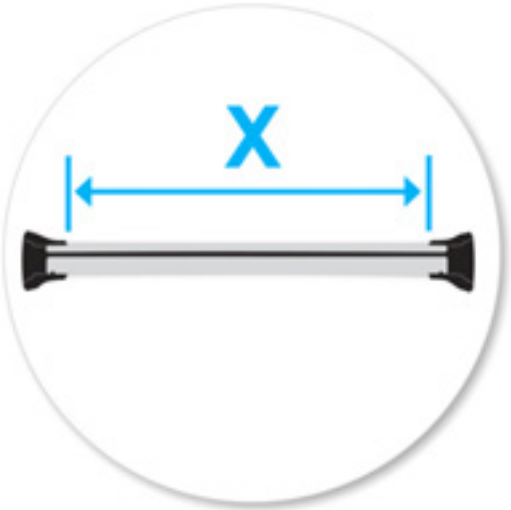

- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.
- Please check the rear of this manual for information relating specifically to your vehicle.

- Tighten adjusting screw to 5 Nm.

- Remove clamp block by pressing backwards.

- Select plastic internal block (from fitting kit) and insert into foot.
- Repeat for all legs.

- Fit rubber pads (supplied with fitting kit) to foot. Pad may vary in shape to that shown.
- Make sure the pad fits into the holes underneath the foot.
- Repeat for all legs.

Fitment

- NOTE: Land Rover Discovery - Do not use front fixpoint
- Locate and remove the small plastic bungs on the roof.
- Store items away in a safe place.

- Select grubscrews and screw into the vehicle's fixed points.
- Do not over tighten.
- Repeat for all four positions.

- Place crossbar foot over grubscrews.

- Ensure the pads are in the correct position and the clamp threads pass through the crossbar feet.

- Tighten the red plastic knob. The side with the nut showing should be facing up.

- In the fully tightened position, the knobs should be parallel with the vehicle.
- Repeat for all four positions.

- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

CAUTION: Regularly check screws are tight